

**IMRLK 156-7 7mm Assembly Instructions**  
**GWR 'Pagoda' style Waiting Room / Store**

**What tools and glue are needed?**


We recommend Deluxe Materials "Laser Glue" and "Glue'n'Glaze" for the windows.

A sharp craft knife, Fine Wet & Dry (400 grit), needle files, modelling tweezers and elastic bands or suitable clamps.



[www.intentio.shop](http://www.intentio.shop)

**WELCOME TO YOUR INTENTIO MODEL RAILWAYS PRECISION SCALE MULTI MEDIA KIT**  
**CAREFULLY READ THROUGH THESE INSTRUCTIONS AND THOROUGHLY FAMILIARISE YOURSELF WITH THE PARTS BEFORE STARTING ASSEMBLY. ALWAYS DRY FIT FIRST.**

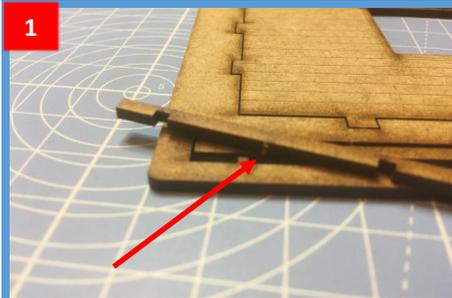


**1**  
When removing parts from the frames take care to clean any remaining attachment "nibs"



**2**  
Prepare the base (1) and the 4 walls (2, 3, and 4 x2)



**3**  
Glue the walls into position using the base as a guide

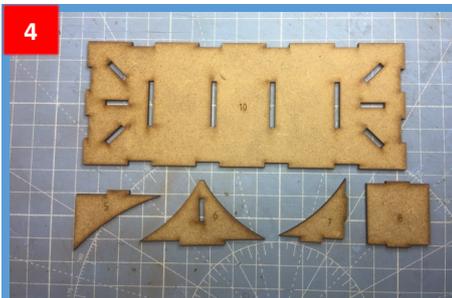

**4**  
Prepare the roof parts:- hips (5 x4), trusses (6 x4), ends (7 x2), spine (8 x3), and ceiling (10)




**5**  
Glue parts 6,7 &8 together as shown and glue to the ceiling as one piece, then glue the hips 5 into position and leave the assembly to dry




**6**  
Prepare the door parts (11 x2, 12 x2, & 13 x2)  
Follow step 7 for "closed" or 8 for "open" doors



**7**  
For closed doors, glue parts 13 to parts 11 with the corrugations showing

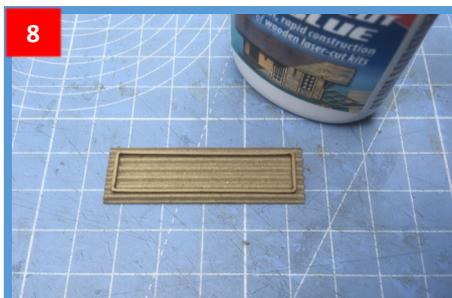

**8**  
For open doors, glue parts 12 to the corrugated face of parts 13 as shown

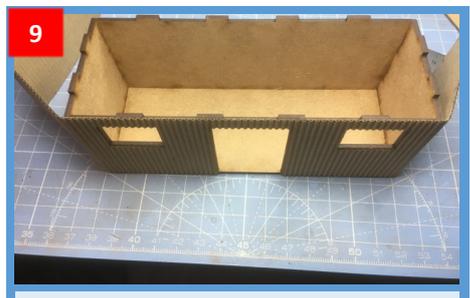

**9**  
Glue the corrugated wrap to the front of the building ensuring the cut-outs line up with the openings for the doors and windows




**10**  
Continue gluing the wrap around the remaining sides



**11**  
Glue the window frames (14 x2) into position as shown



**12**  
At this point you might think to fit the glazing but it may be better to wait until after painting

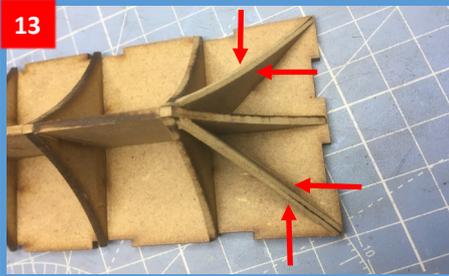

13 With the roof assembly dry, a chamfer needs to be sanded/filed on both sides of the hips as shown to allow smooth fitting of the roof sheets



14 Glue the roof sheets to the frame as shown **\*\*Gentle pre-forming over a cylinder will help\*\***



15 Once the roof sheets are dry, glue the top trims (15 & 16) into position as shown



16 Glue the doors into position of choice **\*\*Image shows one closed and one open\*\***



17 Before the next step you may want to consider if you want to add lighting or any interior details




18 Glue the glazing to the rear of the window frames as shown




19 Glue the roof assembly into position and place your completed model on your layout




20 Visit our shop for more kits you may enjoy

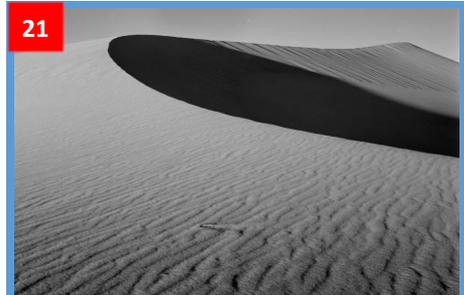


21 SKU No. **\*\*NAME\*\***

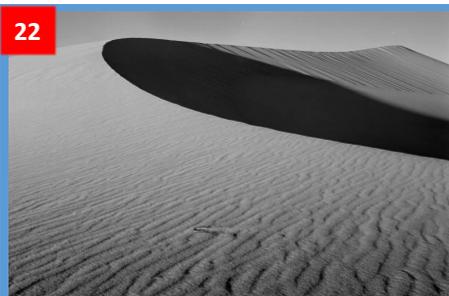


22 SKU No. **\*\*NAME\*\***

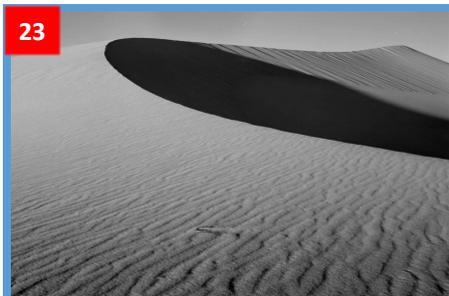


23 SKU No. **\*\*NAME\*\***

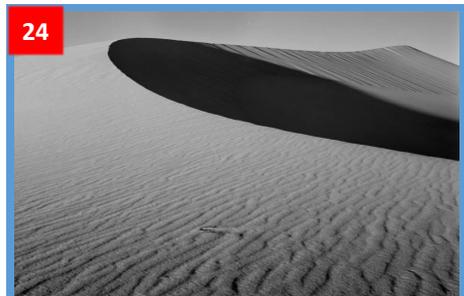


24 SKU No. **\*\*NAME\*\***

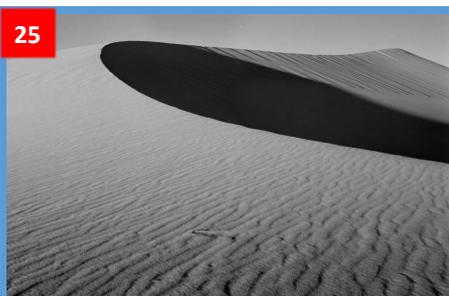

25 SKU No. **\*\*NAME\*\***

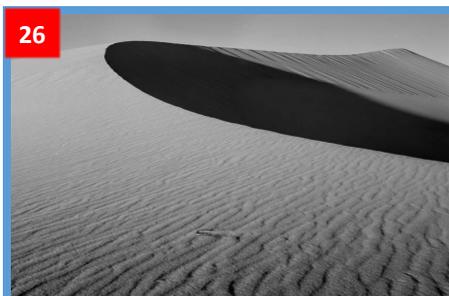

26 SKU No. **\*\*NAME\*\***

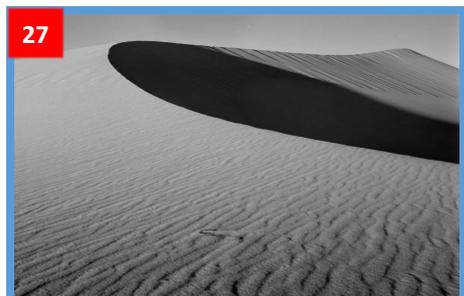

27 SKU No. **\*\*NAME\*\***